

Dinghy Furler

For boats up to 16'

Manual



NautosTM

Requirements of the sail with non permanent forestay

The sail must have a 1/19 3mm (1/8") wire sew in to the luff with thimbles in the tack and head. If your sail have hanks , it must be replaced by wire by your sailmaker.

The sail will replace the forestay so it remains in the boat furled when not in use.

Installation

The furling drum: goes fixed in to the bow via the cut and pin already in the drum base. If you need to change the angle 90°, do it adding a shackle under the drum.

The upper swivel: it's attached to the jib halyard and to the head tack.


Furling line length: measure the distance from the drum to the cleat and add 3,10 meters (3 feet).

Lead and cleat : Lead a good quality 3mm polyester cover line trough one of the rear apertures and trough the hole in the spool center and lock it with a 8 knot. Install a plastic eye starboard side were the line makes 90° with the forestay an lead aft to a cleat.

Attach the regular jib sheet in both sides,

Furling the jib

Furl the sail first time by hand an test the length of the line. The proper installation allows two turns of the sheets around the furled sail and plenty of cable to be cleated.

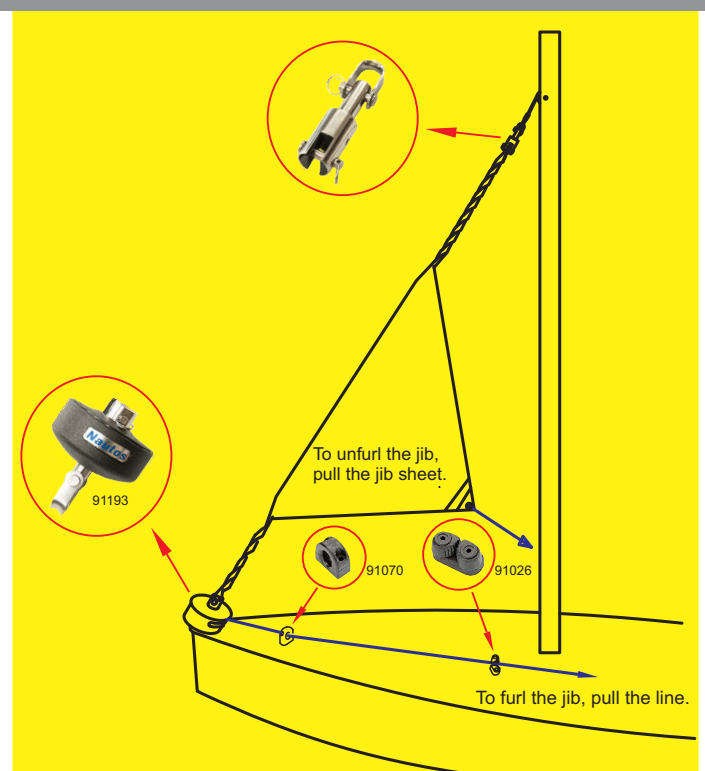

Requirements of the sail with permanent forestay

The sail must have a 3mm (1/8) wire 1/19 or a 6mm (¼) aramida with Polyestser cover sew in to the luff with thimbles in the tack and head. If your sail have hanks , it must be replaced by the wire/rope by your sailmaker. The sail may be removed from the boat when not in use.

Installation

The furling drum: goes fixed in to the bow via the cut and pin already in the drum base. If you need to change the angle 90°, do it adding a shackle under the drum.

The upper swivel: it's attached to the jib halyard and to the head tack.


Furling line length: measure the distance from the drum to the cleat and add 3,10 meters (3 feet).

Lead and cleat : Lead a good quality 3mm polyester cover line through one of the rear apertures and through the hole in the spool center and lock it with a 8 knot. Install a plastic eye starboard side were the line makes 90° with the forestay and lead aft to a cleat.


Attach the regular jib sheet in both sides,

Furling the jib

Furl the sail first time by hand and test the length of the line. The proper installation allows two turns of the sheets around the furled sail and plenty of cable to be cleated.

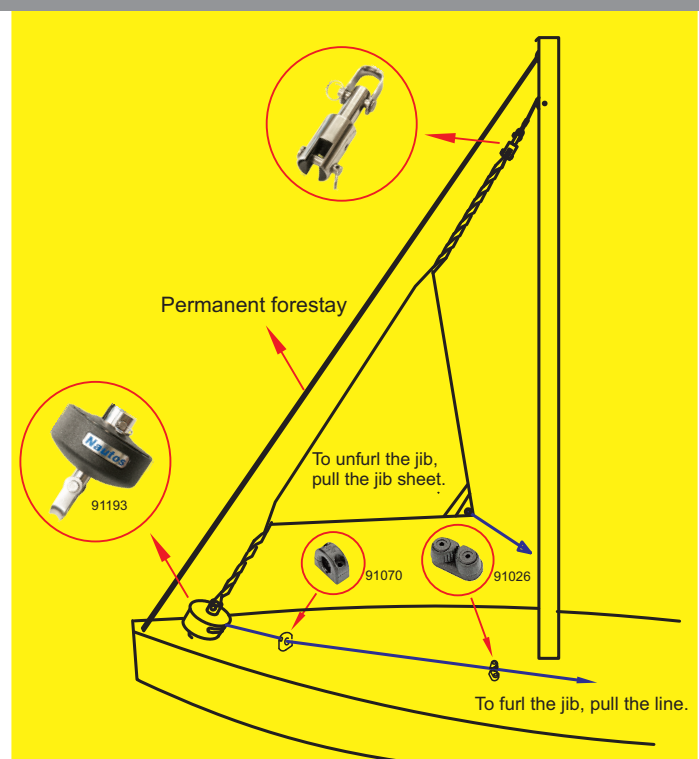

Technical information

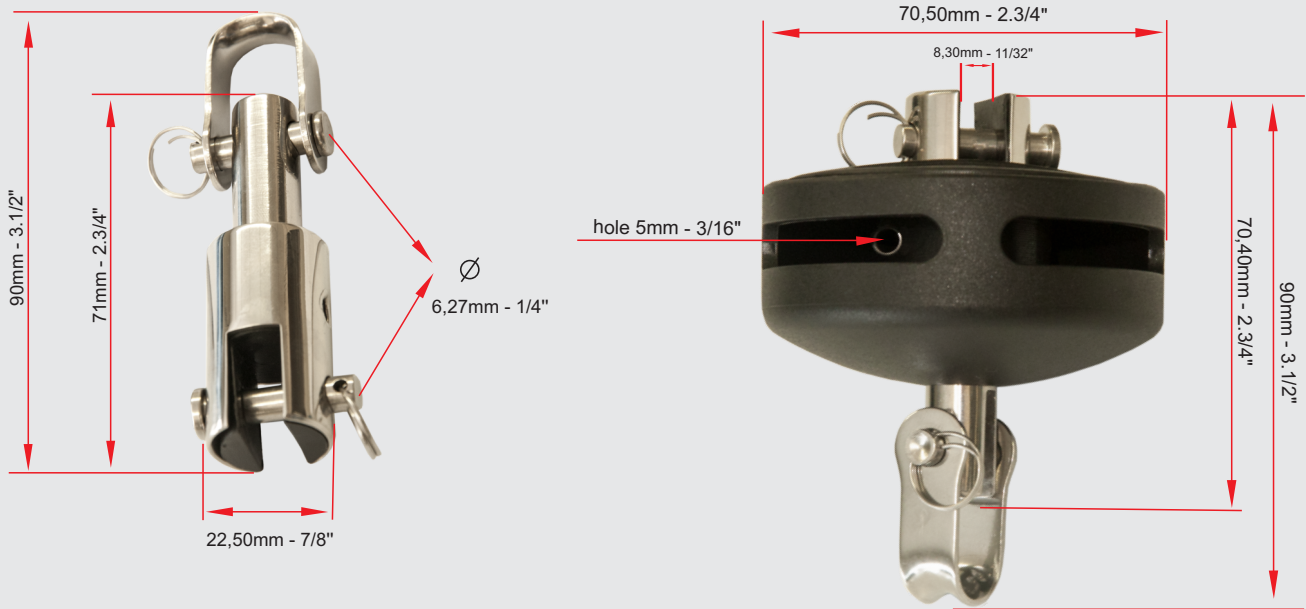

NautosTM



nautos-sailinghardware.com



facebook.com/nautos/



55 54 3026 1600



55 54 99618 2279